


Fountain Installation Guide

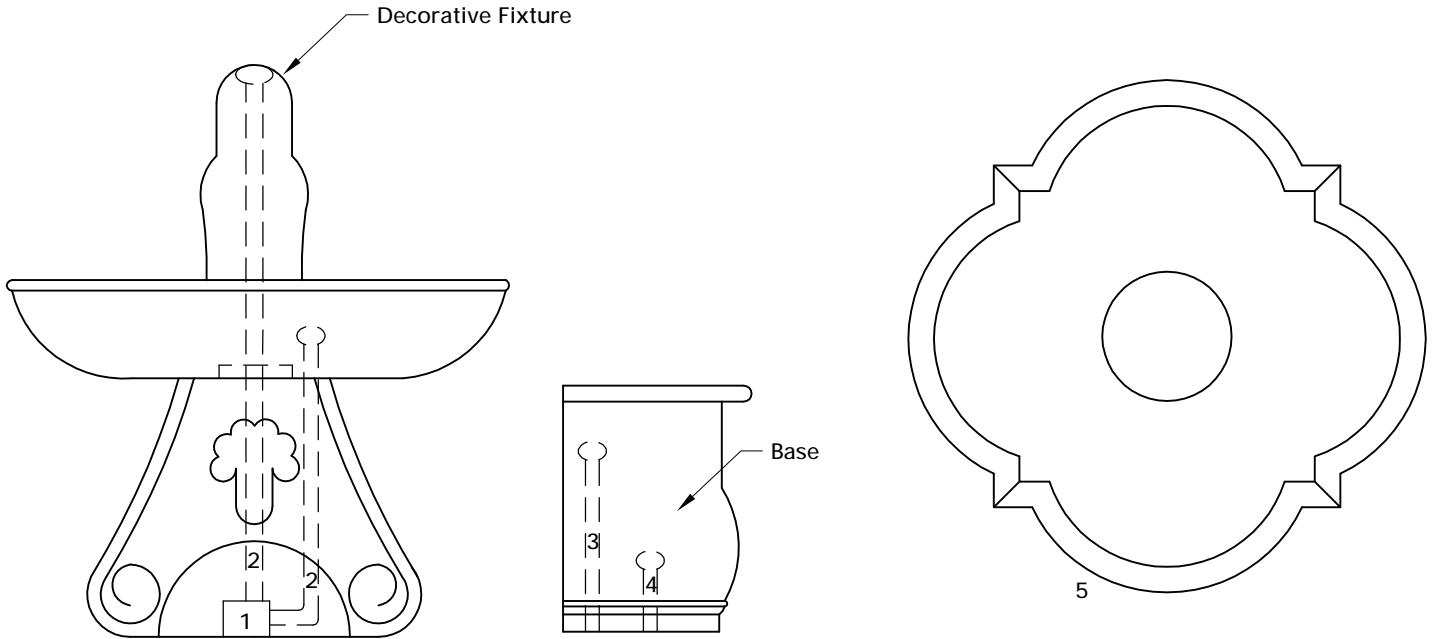

1. Pump installed in Fountain Base
2. Water Feeds: One line feeds bowl, one line feeds Decorative Fixture
3. Gravity Drain: Place in bowl with Pool at desired water height
4. Sprinkler Head: Place at bottom of Pool for water refill
5. Outside of Pool: Place Electrical Box for Pump, Lighting, and Timer
Place Timer inside Garage
Filter (None): Maintain with Chlorine Tablets

Note: Contractor will set pool elevation and pour slab, provide Electrical Junction Box (Pump, Lighting), stub- out for Water Line, and make necessary hook- ups