




# Casing & Trim

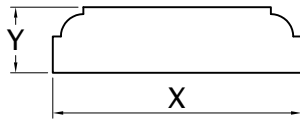


Style #	X	Y	Lbs.
TRM-001	6"	1 <sup>9</sup> / <sub>16</sub> "	33.8

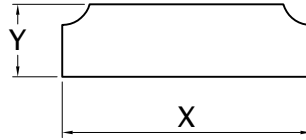


Style #	X	Y	Lbs.
TRM-002	6"	1 <sup>3</sup> / <sub>4</sub> "	38

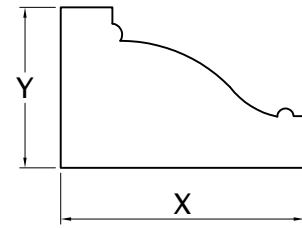


Style #	X	Y	Lbs.
TRM-003	5 <sup>7</sup> / <sub>8</sub> "	3 <sup>7</sup> / <sub>8</sub> "	58

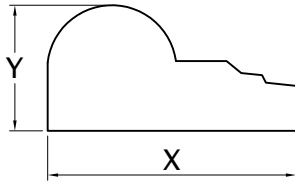


Style #	X	Y	Lbs.
TRM-004	6"	3 <sup>1</sup> / <sub>16</sub> "	47.8
TRM-004	8"	4 <sup>1</sup> / <sub>16</sub> "	84.9

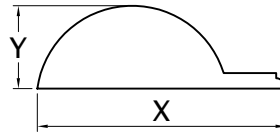


Style #	X	Y	Lbs.
TRM-005	6"	2"	28.3
TRM-005	12"	4"	113.2




Style #	X	Y	Lbs.
TRM-006	4"	1 <sup>1</sup> / <sub>16</sub> "	12.2
TRM-006	6"	1 <sup>5</sup> / <sub>8</sub> "	27.6
TRM-006	8"	2 <sup>3</sup> / <sub>16</sub> "	49.1
TRM-006	10"	2 <sup>1</sup> / <sub>16</sub> "	76.7
TRM-006	12"	3 <sup>1</sup> / <sub>4</sub> "	110.4

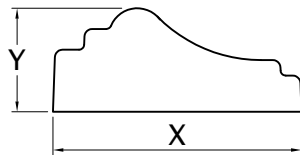

Style #	X	Y	Lbs.
TRM-007	4 <sup>1</sup> / <sub>2</sub> "	1 <sup>7</sup> / <sub>8</sub> "	21.4
TRM-007	6 <sup>1</sup> / <sub>4</sub> "	2 <sup>5</sup> / <sub>8</sub> "	41.2
TRM-007	8"	3 <sup>5</sup> / <sub>16</sub> "	67.5
TRM-007	10"	4 <sup>4</sup> / <sub>16</sub> "	105.5
TRM-007	12"	5"	152

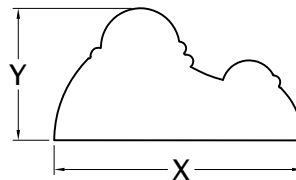

Style #	X	Y	Lbs.
TRM-008	4"	2 <sup>7</sup> / <sub>8</sub> "	20.6
TRM-008	6"	3 <sup>3</sup> / <sub>16</sub> "	46.4
TRM-008	8"	4 <sup>1</sup> / <sub>4</sub> "	82.3
TRM-008	10"	5 <sup>5</sup> / <sub>16</sub> "	128.8
TRM-008	12"	6 <sup>3</sup> / <sub>8</sub> "	185.5

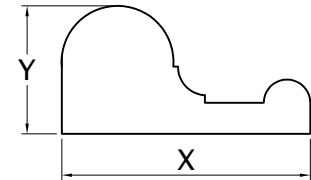

Style #	X	Y	Lbs.
TRM-009	6"	3 <sup>1</sup> / <sub>16</sub> "	42.4
TRM-009	8"	4 <sup>1</sup> / <sub>16</sub> "	75.3
TRM-009	10"	5 <sup>1</sup> / <sub>4</sub> "	117.7
TRM-009	12"	6 <sup>1</sup> / <sub>16</sub> "	169.5

- Casing & Trim can be used for Window and Door Surrounds
- Section lengths are 48"